


1. BACK BOXES RANGE (cont.)


1.1 Auto adjustable back box reference numbers 0 880 90/91/92

1.1.1 Dimensions

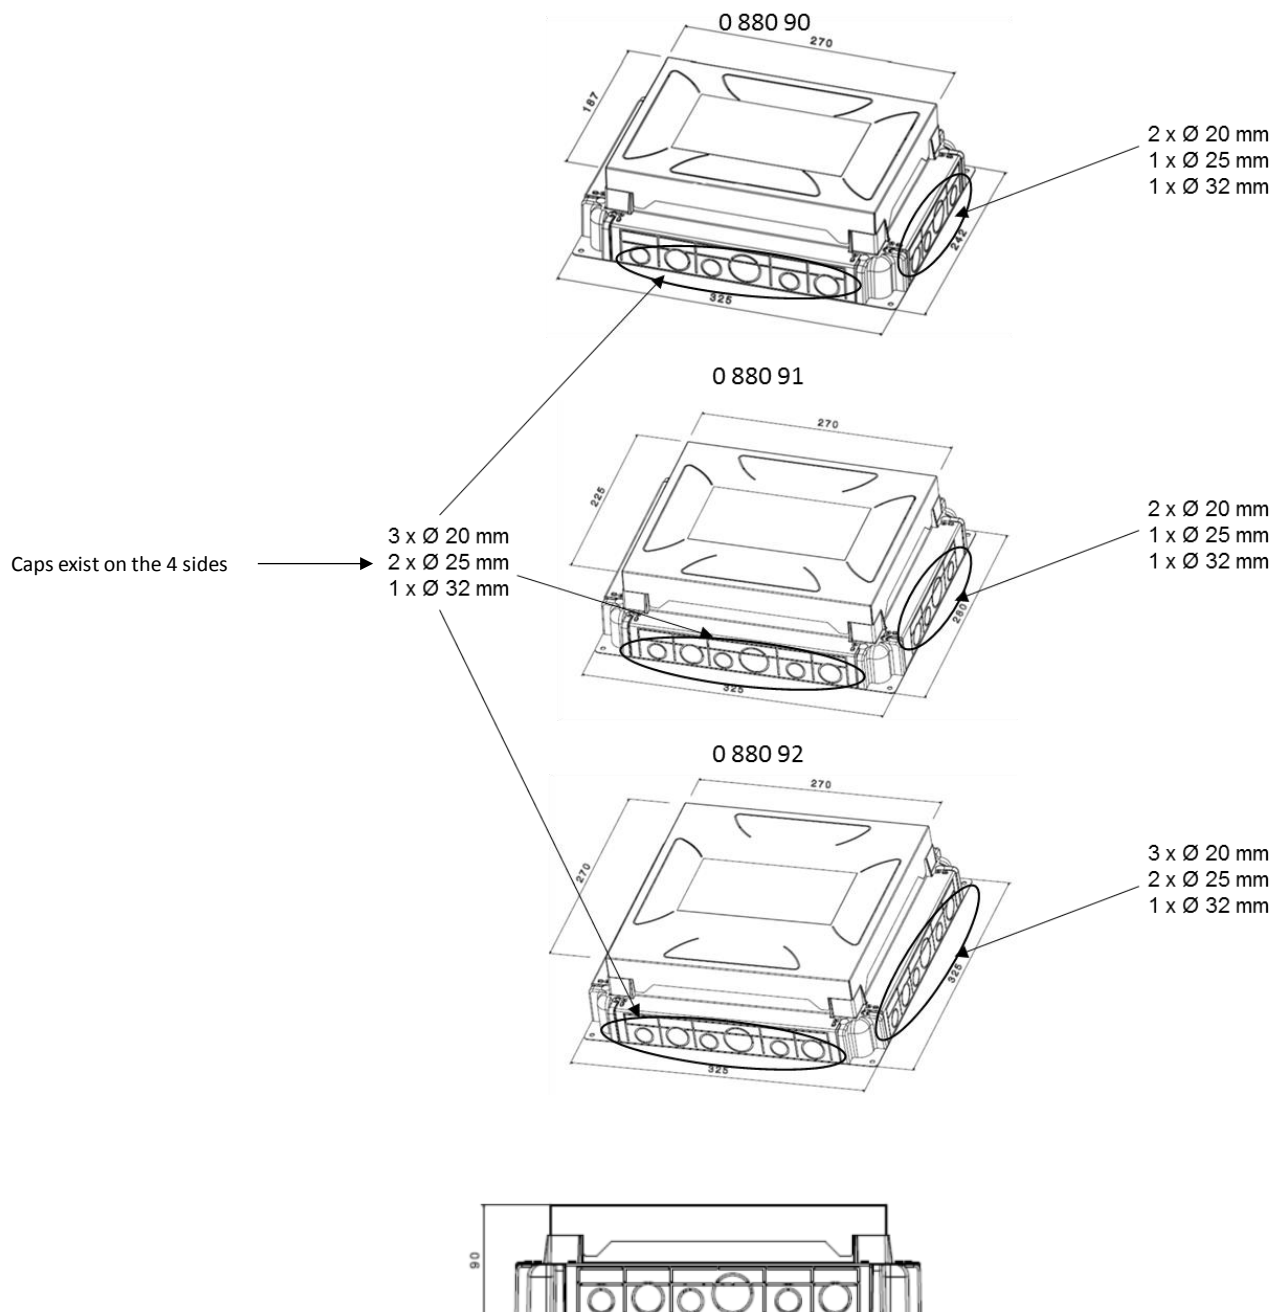


1. BACK BOXES RANGE (cont.)


1.1.2. Pouring concrete

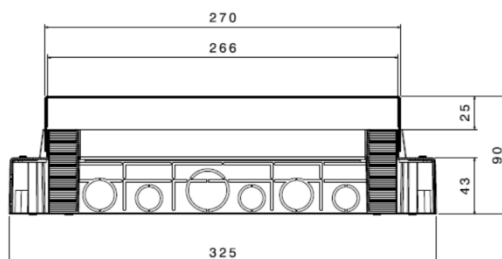


Fix the back box on the slab

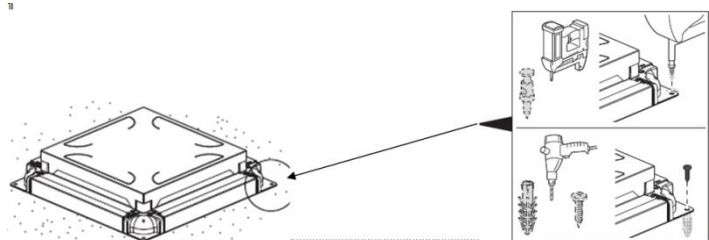

Put the trunking or flexible conduits (use a tool to fold), the side plates (figure 1) have to be cut out to fit the required ducting and/or conduits

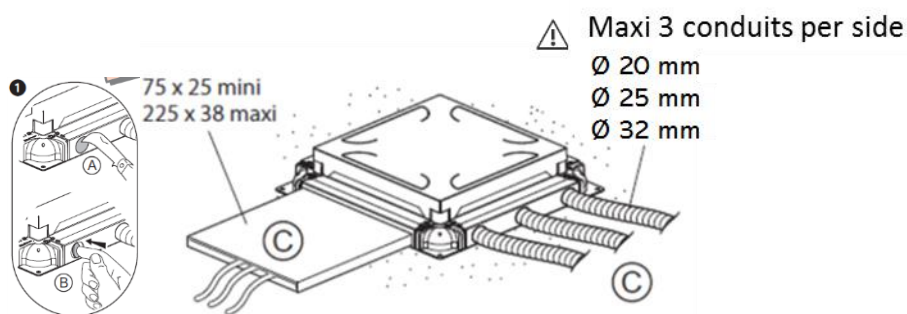

Pour the concrete

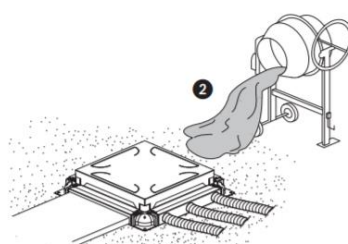

⚠ in case of very fluid concrete (such as anhydrite for example), please make sure of the back box sealing before pouring concrete : put some adhesive tape on unsafe area (for example : cover, conduits inputs, trunking)

Push to fold and pull up the metal protection to install the floor boxes

