



Saves Your Energy

Working instructions

Detachment of knock-outs and flange knock-outs
TYO138/B/5.12.2012



Tools needed



Screwdriver or chisel

Hammer





Detachment of knock-outs

Hitting points:

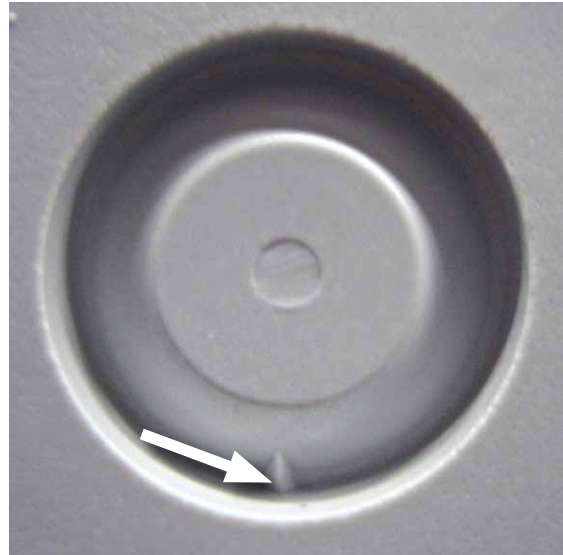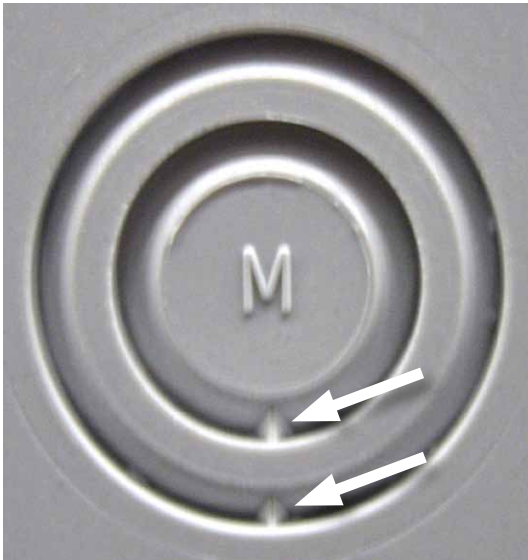


Step 1

Step 2

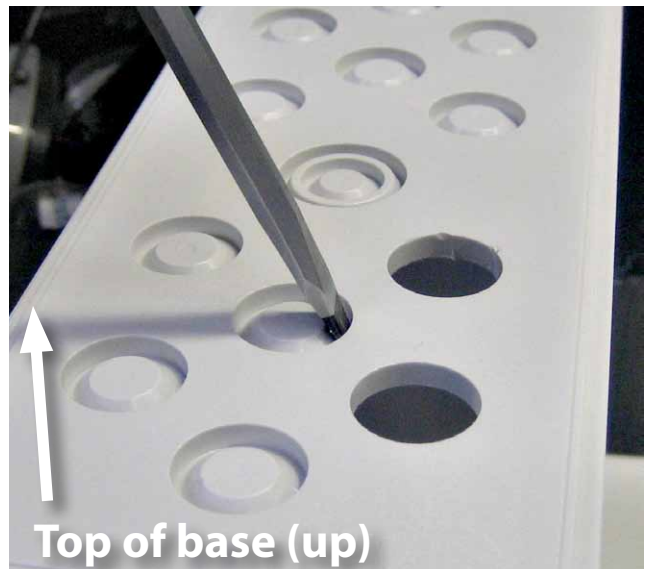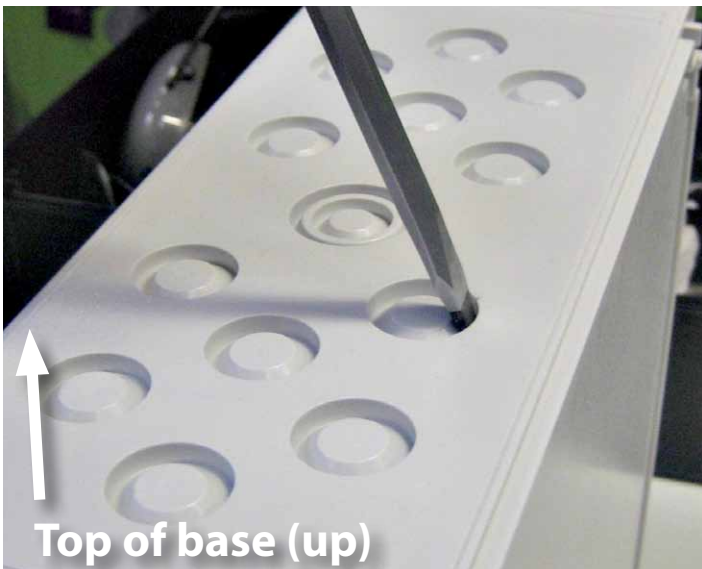


Detachment of flange knock-outs

Hitting points:

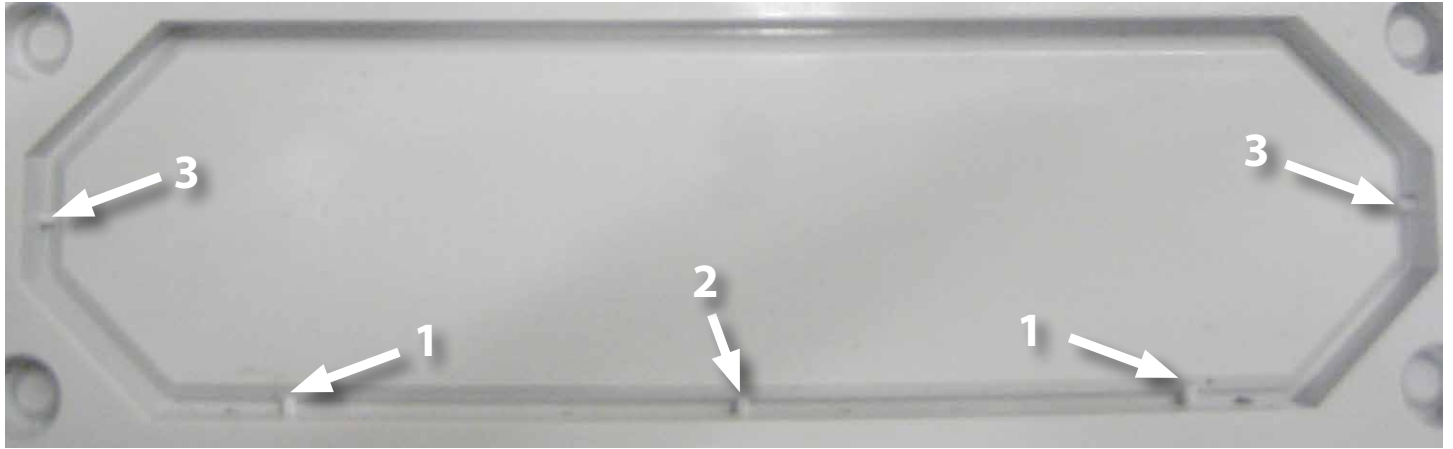


Step 1

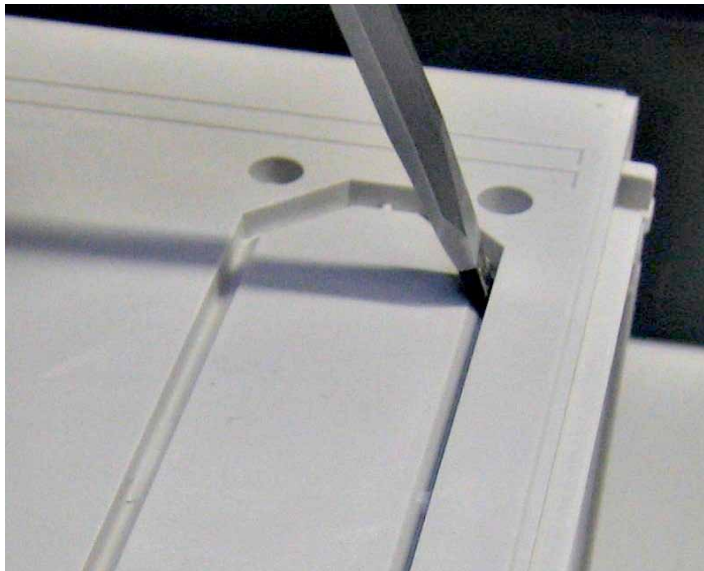

Step 2



Step 3

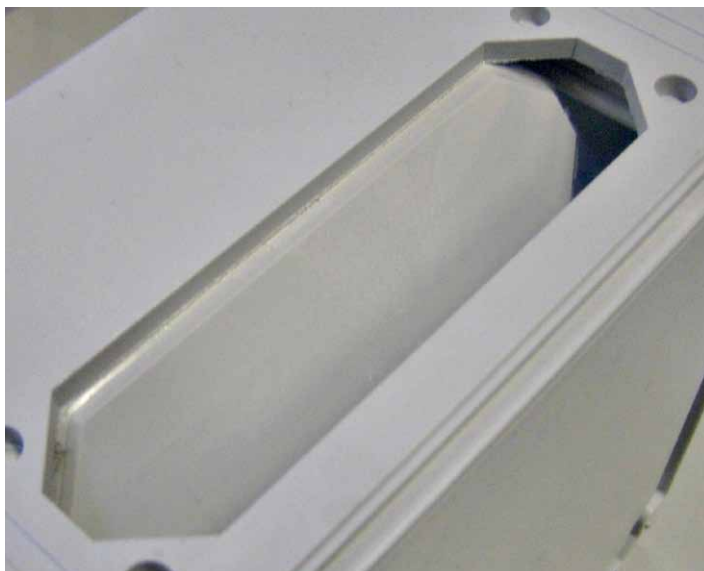

Step 4





Saves Your Energy

Ensto Finland Oy
Ensio Miettisen Katu 2, P.O. Box 77
FIN-06101 Porvoo, Finland
industrial.solutions@ensto.com
www.ensto.com