

Detail of the elements



or




PKE 2508
tips
grey*

PKE 1508
tips
black*



Sleeve

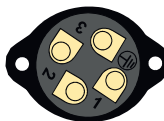

Connector



Female base



Base



Cable clamp 140x3.5mm



Cap + link



Self drilling screws
4.2x19

Assembly

1

Crimp the PKE tips on the conductors


*Black tips : 1.5mm² wires

*Grey tips : 2.5mm² wires



2

Pass the cable in the sleeve

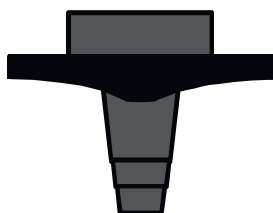


3

Screw the conductors :

- green/yellow wire into the insert ⊕


- brown wire into the insert n° 1

- blue wire into the insert n° 2

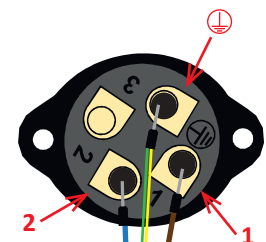

4


Pull the cable into the holder until the connector is pressed into the sleeve

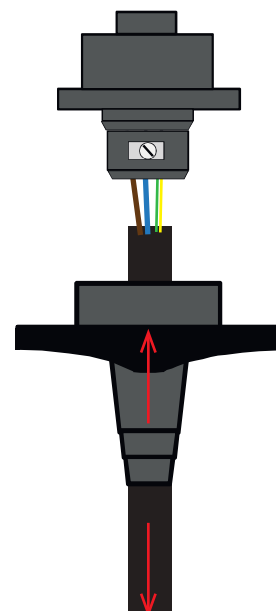

Assembly (continued)


5

Place the base body over it and press it against the sleeve

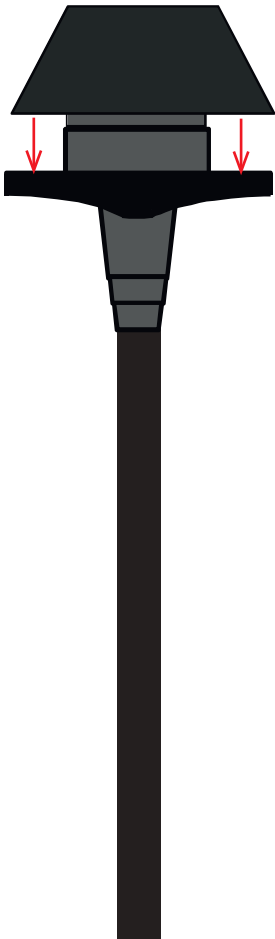


6

Tighten the collar on the last step of the sleeve

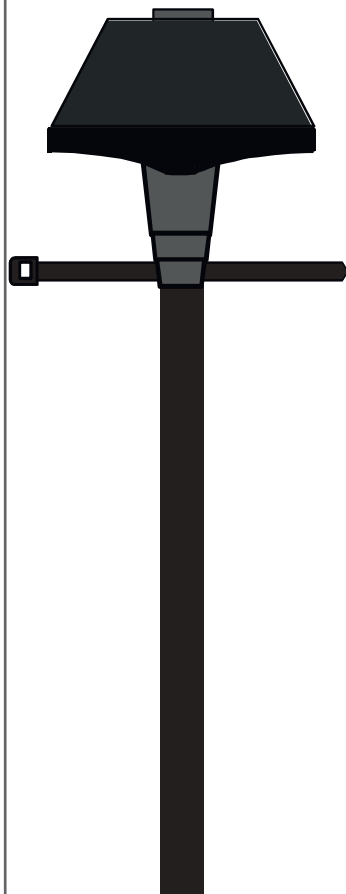


7

Screw the cap

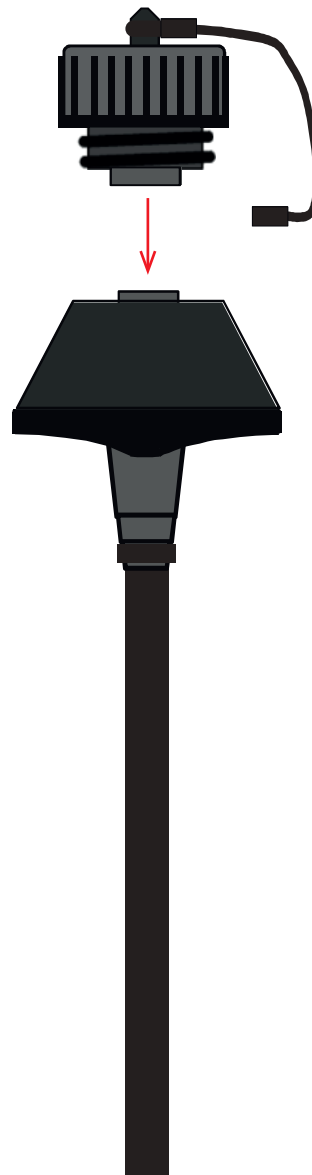

8

Pass one of the screws in the link and screw the 2 screws into the holes

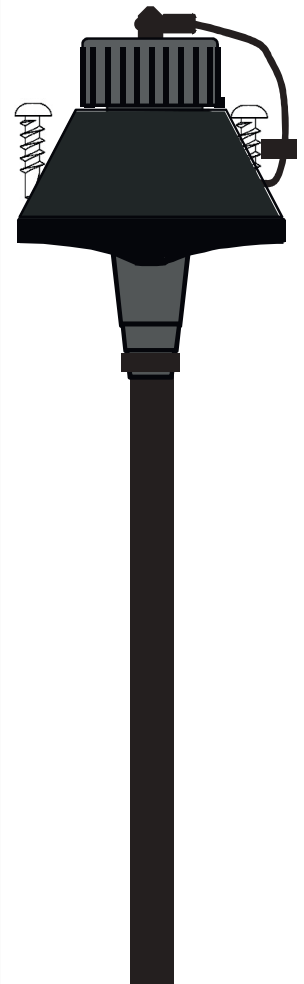

Need help ?

Please contact our Customer Technical Service : + 33 472 548 431 or sogexi@lacroix-city.com